

In folder ..\Download soft\ is self extracting zip file (downloader.exe) with update for the ZPM machine.

To update software in machine:

1. Connect machine with computer via serial cable
2. Switch ON machine
3. Run self extracting archives dloader.exe
4. Run program: dloader.exe after decompression process
5. In menu: *Daten/Select comport* set correct communication port where is connected cable from the machine (if is not com1)
6. In Menu: *Daten/Offnen und Herunterladen* find and open file: Hex3-xx.hex.
7. Now uploading will begin.

Don't break this process.

If progress bar on status bar will stop and program don't response any longer:

Switch OFF machine

Kill task "Dloader.exe" in task manager (CTRL+Alt+DEL)

Repeat steps: 4,5,6 (see up)

Switch ON machine.